


## SHOWER

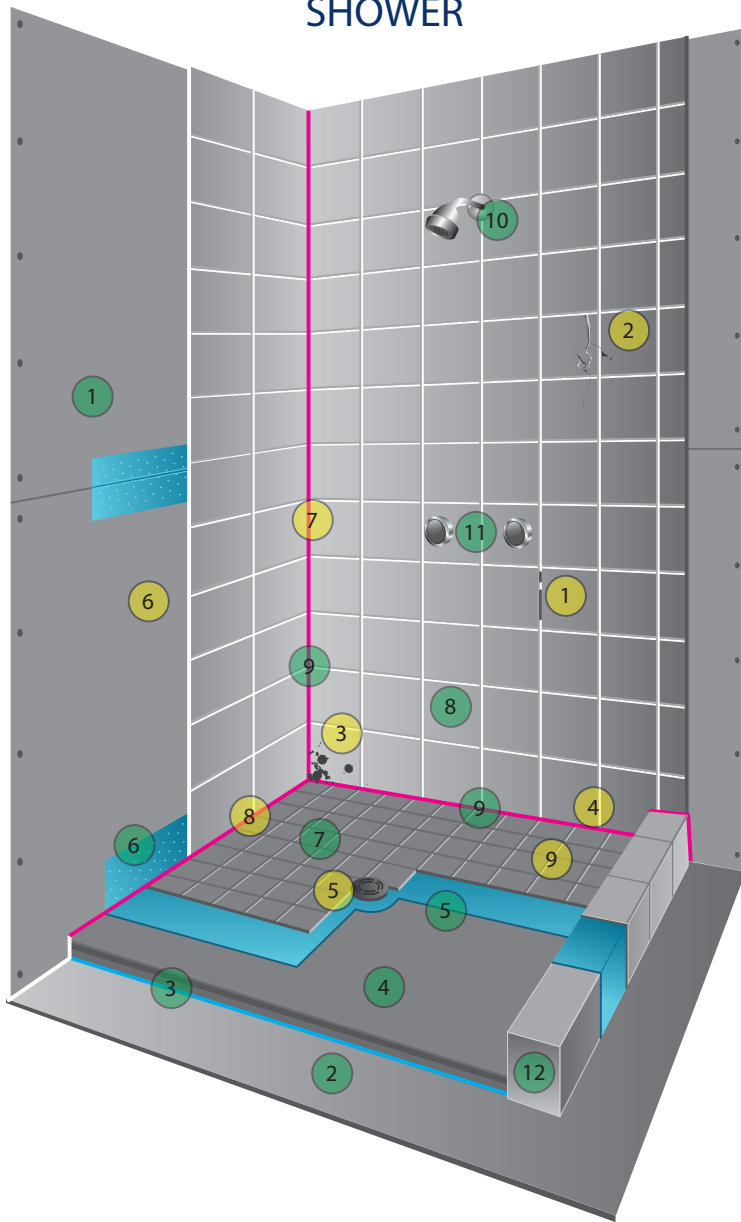

### SCR terminology - Shower Recess

- 1 Industrial Waterproof Tile Sheeting
- 2 Scyon Cement Sheeting
- 3 Industrial Waterproof polyurethane seals to sheeting
- 4 Screed
- 5 2 x layers of waterproof membrane
- 6 Polycloth in between layers of membrane
- 7 Base tiles - tiled BEFORE walls
- 8 Wall tiles
- 9 Main Junction Joint Polyurethane/ Epoxy Seals
- 10 Shower Rose
- 11 Shower Taps
- 12 Hob Step


### Possible damage/faults - Shower Recess

- 1 Cracked, missing, loose grout
- 2 Cracked, broken, loose or missing tiles
- 3 Mouldy and discoloured grout, seals or tiles
- 4 Worn, missing or non-existent seals
- 5 Incorrect fall towards the drain so water pools
- 6 Incorrect sheeting or no membrane.
- 6 Movement in walls.
- 7 Split, open, non-existent Seals on the MJJ
- 8 Faulty tiling where walls tiled before base
- 9 Tiles butted too close - no grout gaps

### SCR terminology - Shower Wastes



Chrome Grate

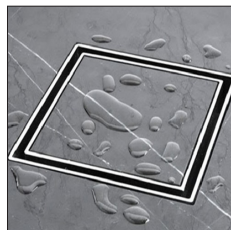

Smart Tile Grate



Tray Grate



Puddle Flange

